

THERMflow Wiring Diagram Boiler

Notes

- * - Terminals 4 and 5 SHOULD BE linked, if a room stat is required this link should be removed and replaced with the room stat link.
- To be used in conjunction with the attached wiring instructions
- Some boilers require a permanent Live. Refer to boiler instructions for details

Key

Live		Switch Live	
Neutral		Switch 1	
Earth		Switch 2	

